



## USER MANUAL

### F9000 MOBILE VALIDATOR (Eng 01)



## How to use this manual

Thanks for choosing this innovative ISEO product.

This user manual was compiled to offer a guide on the installation of SIRIO.

For the installation of the devices, set-up of the opening and other operations not described herein, refer to the installation and configuration manuals, available in the download area of ISEO Zero1's website, at:

[www.iseozero1.com](http://www.iseozero1.com)

**The installation, initial set-up and changes to the setting, require the intervention of qualified staff, properly trained by ISEO Zero1.**

- Read this manual prior to use the device in order to ensure a safe and proper use
- Preserve this manual as future reference

## Informative icons

Please familiarise with the icons below, for an easy reading of the manual:



**Warning:** it indicates situations that could cause harm to people or animals



**Be careful:** it indicates situations that could cause damages to the device or other equipment



**Note:** it indicates notes, suggestions and additional information

## Information on copyright

The rights concerning all technologies and products which are part of this device, belong to the relative holders.

 
## F9000 Mobile – Install the app

Install the F9000 Mobile app from this site: [app.iseo.com](http://app.iseo.com)

## F9000 Mobile – Configuration



Before to use this app, you have to be sure that the bluetooth is enabled on your mobile device.

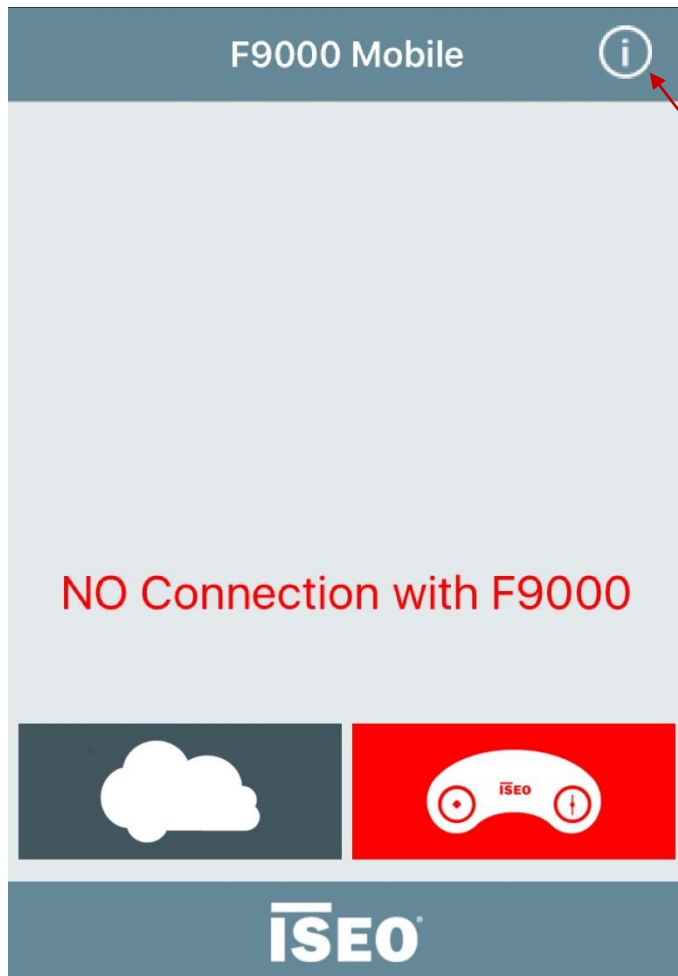

When you open the app, you see this page.

To set the configuration push the «Info» button.

This two images shows you the status of the internet connection (on the left) and the bluetooth connection with the F9000 Mobile Validator (on the right).

If the background color is:

- DARK GRAY device connected
- BLUE an operation is in progress
- RED device unconnected

< F9000 Mobile Info



Software Version

F9000 Mobile Version1.2

F9000 Mobile SoftwareMH0Z3021

ATLAS Server

IP Address192.168.10.92

Port23

F9000 Mobile Programmer

Device Name001542012D4C

F9000 Key Type

V2 KeyFalse

On this page you can see all the configuration parameters of the F9000 Mobile app.

If you want to change these parameters you have to push the «gear» button.

By default the app understand if the linked device is an V1 or V2.  
In that example, the F9000 Mobile Validator has a V1 firmware.

< Info Configuration

Configuration Login

Request Password☐

Atlas server

IP Address192.168.10.92

Port23

F9000 Mobile Programmer

Device Name001542012D4C

V2 Key☐

V2 Key☐

Set the IP Address and Port defined on the Ethernet Gateway (see its configuration) if you use the device in your network.  
Otherwise you have to set a public IP Address and Port reachable from the outside of your network. You can ask it to your network administrator.

Push the button «major» to search the F9000 Mobile Validator.

Pairing

< Configuration Configuration Device

Device Configuration

Device Name001542012D4C

Firmware VersionMH0Z3021

Firmware Update Mode

 
Scan

001542012D4C


This function is used when you want update the F9000 Mobile Validator.

Select SCAN to find your F9000 Mobile Validator.

Select the right Mac Address (read it on the label on the bottom of the device).

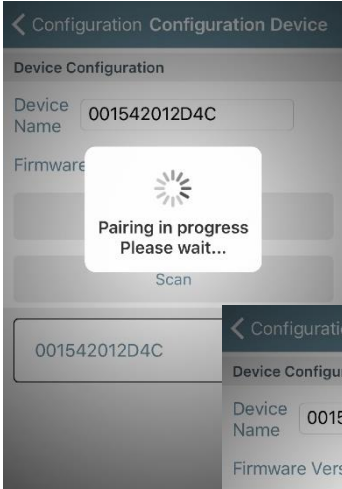

 If pairing failed, before training again, remove the device from the bluetooth list (if exist) and then switch off and switch on the bluetooth.

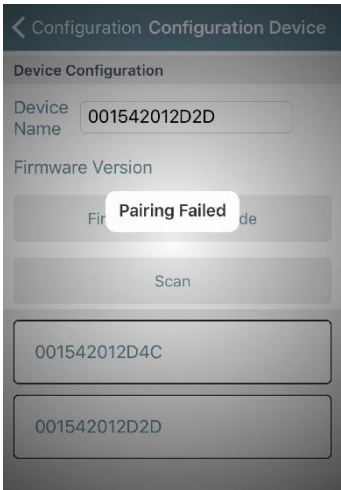



Firmware update

< Configuration Configuration Device

Device Configuration

Device Name001542012D4C

Firmware VersionMH0Z3021

Firmware Update Mode

Scan

001542012D4C

This function is used when you want update the F9000 Mobile Validator.

When the F9000 Mobile Validator is in «Firmware Update Mode» you can use IseoUpdater to update the firmware.

The firmware code are:

 
MH0Z3xxx (V1)

MH10Pxxx (V2)

where «xxx» are the release of the firmware.






F9000 Mobile – Use

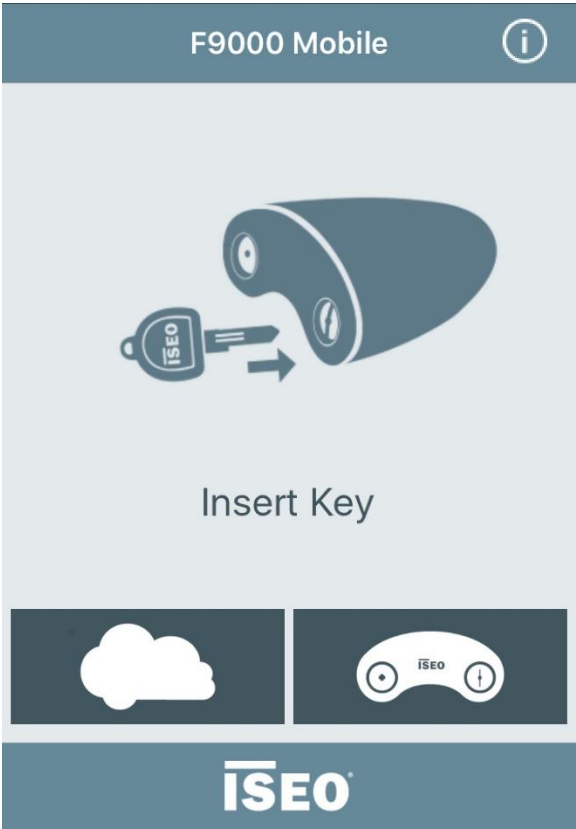

After the configuration, get back to the first page.

   Follow the instructions to validate the CSF Key.

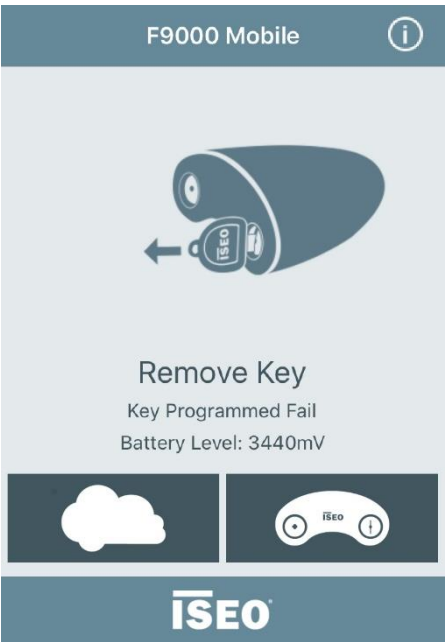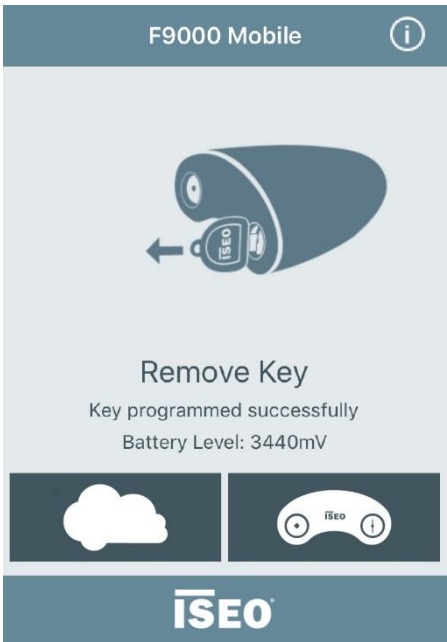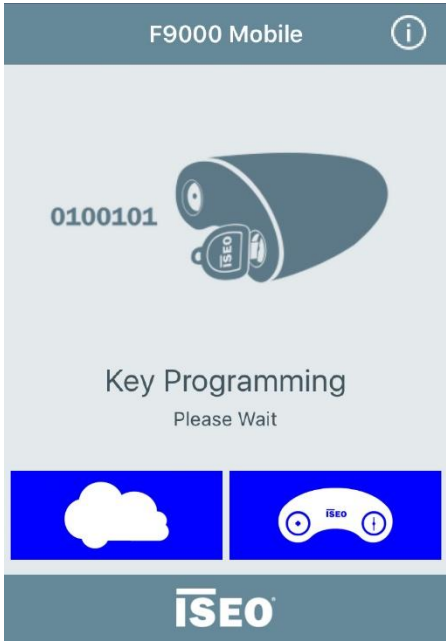





[www.iseo.com](http://www.iseo.com)

**Iseo Serrature s.p.a.**  
Via San Girolamo 13  
25055 Pisogne (BS)  
Italy  
Tel +39 0364 8821  
Fax +39 0364 882263  
[iseo@iseo.com](mailto:iseo@iseo.com)

**Iseo Serrature s.p.a.**  
Via Don Fasola 4  
22069 Rovellasca (CO)  
Italy  
Tel +39 02 96740420  
Fax +39 02 96740309  
[www.iseozero1.it](http://www.iseozero1.it)

**ISEO Zero1**  
ELECTRONIC SUPPORT SERVICE  
[iseozero1@iseo.com](mailto:iseozero1@iseo.com)

**800-728722**  
numero verde gratuito